


Series 19 CAV Failsafe Wiring Diagram

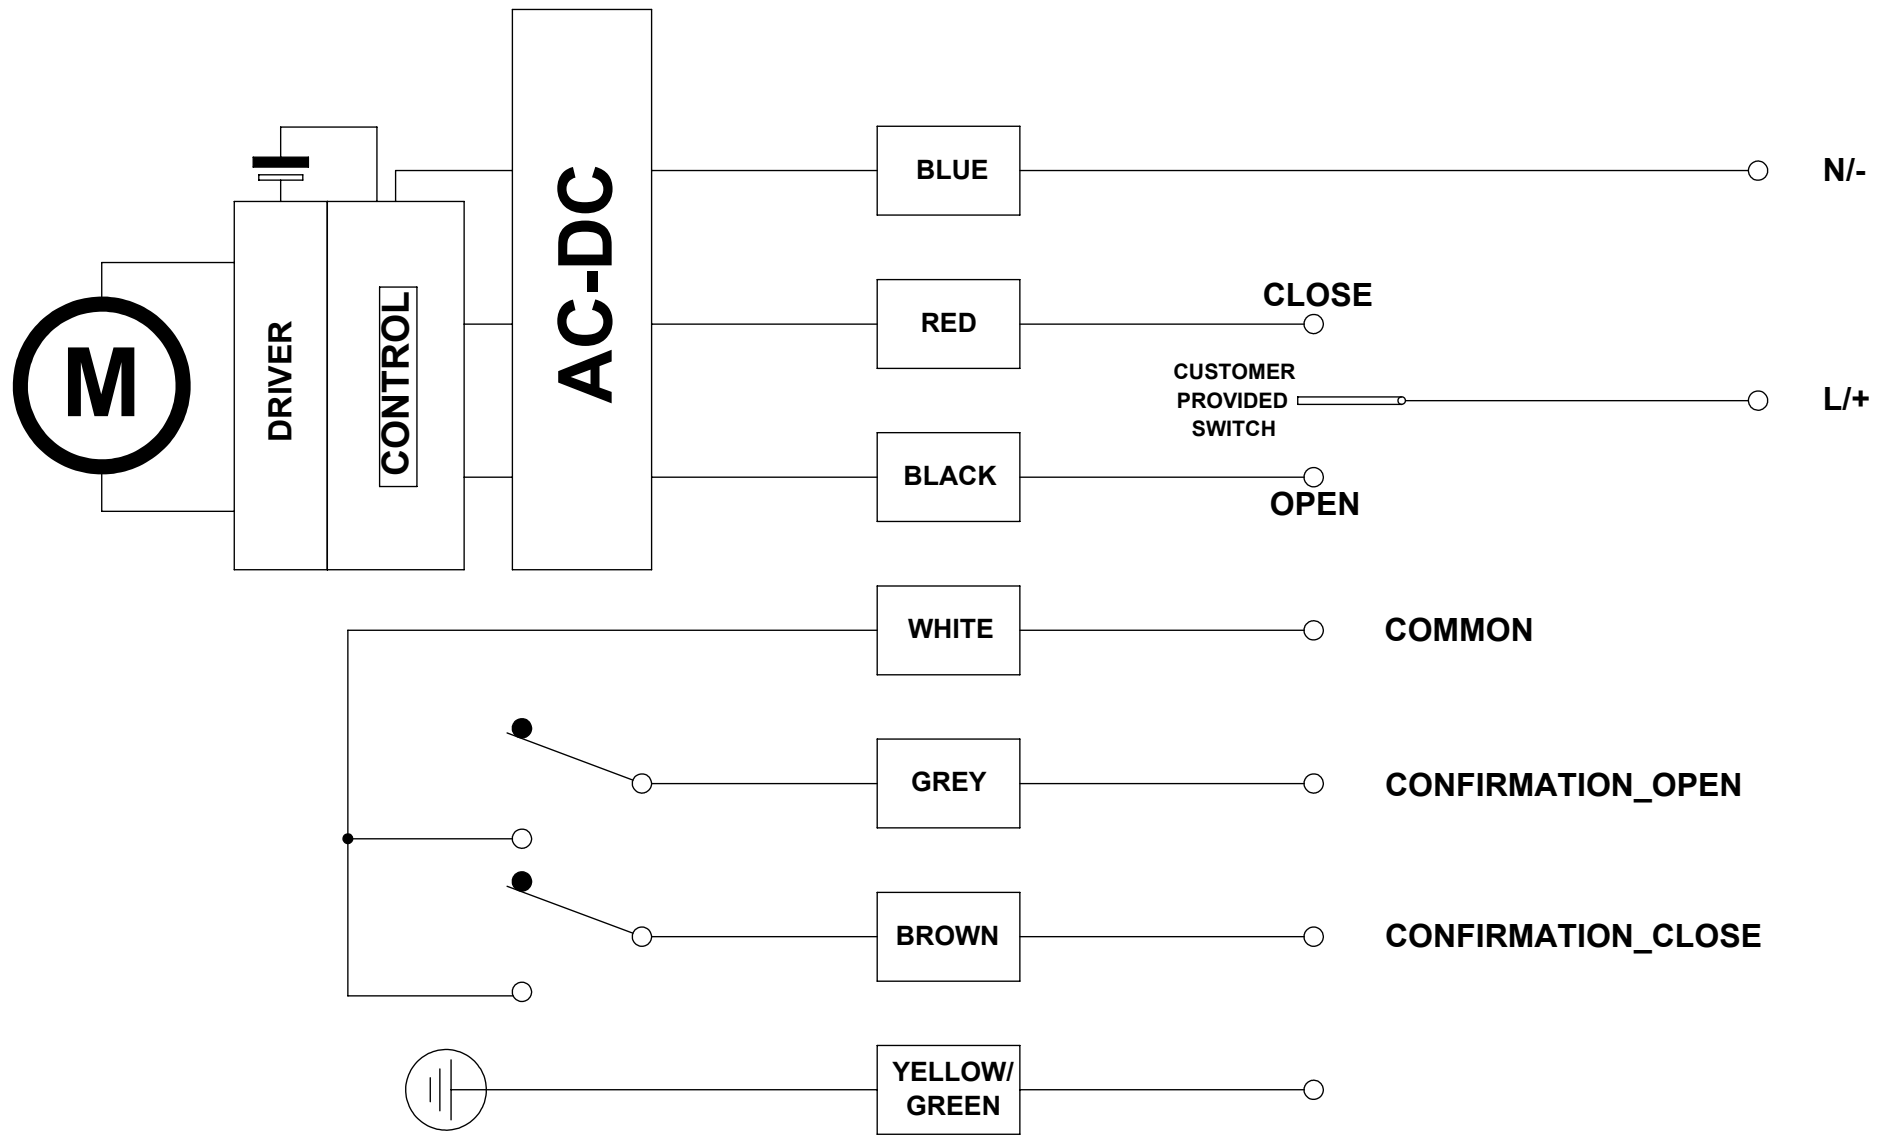

NOTES:

1. HEATER IS INTERNALLY WIRED & OPERATIONAL AS LONG AS ACTUATOR IS POWERED